


YKK AP
EXTERIOR®

The technical drawings illustrate three different door pull handle designs:

- Type A (Left):** Features a horizontal bar with three circular pulls. The distance between the centers of the pulls is 10 units. The diameter of each pull is $\phi 4.5$. The mounting plate has a width of 30 units.
- Type B (Middle):** Shows a curved handle with a single circular pull. The diameter of the pull is $\phi 4.5$. The mounting plate has a thickness of 6.5 units.
- Type C (Right):** Displays a vertical handle with a single circular pull. The diameter of the pull is $\phi 6$. The mounting plate has a height of 7 units.

一般ポリカ	アースブルー	2A
	スモークブラウン	2C
	トーマイマット	2F
熱線遮断ポリカ	アースブルー/マット仕上げ	3B
	トーマイマット	3F

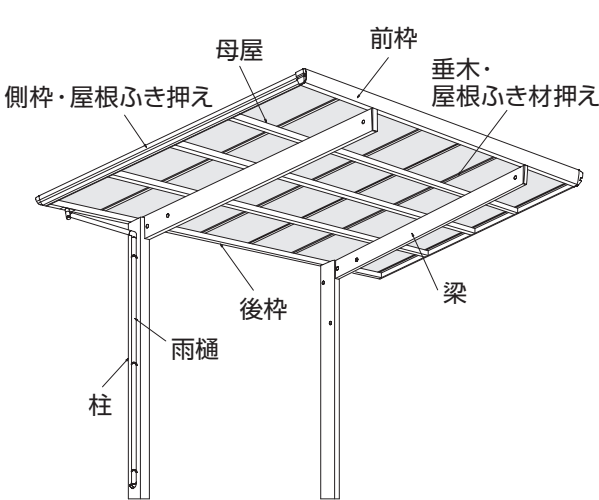


組立・施工要領

6.前枠の取付




7.寸法確認・調整

- ①柱の間隔・垂直
 - ②梁と後枠・梁と前枠の直角
 - ③後枠(長さ方向)の水勾配
- ※雨樋取付側が水下側
- ポイント**
- 寸法がでない場合は、部材を動かして調整してください。

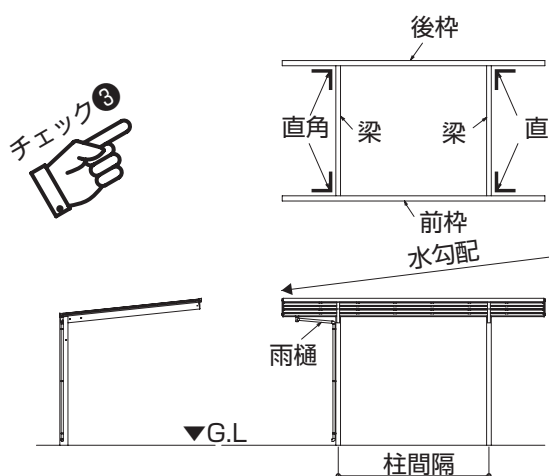


8.母屋の取付

緩衝材を母屋の切欠き端部より約200mmの位置に貼付け、母屋を取付けてください。

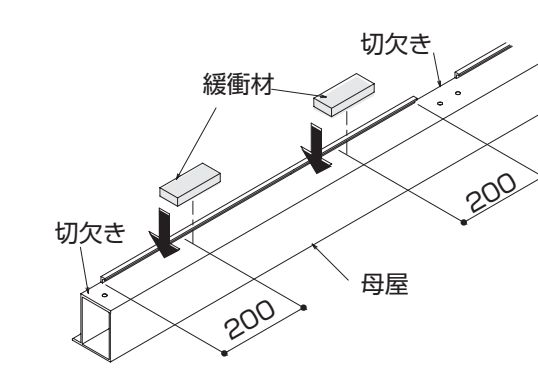


ポイント

緩衝材を母屋のヒレに突き当てて貼付けてください。

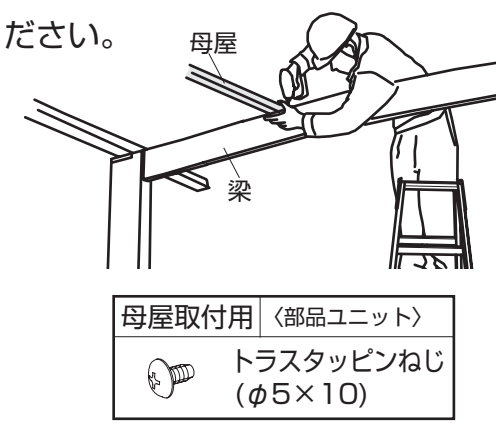


ポイント



母屋のヒレを前枠側に向けてください。

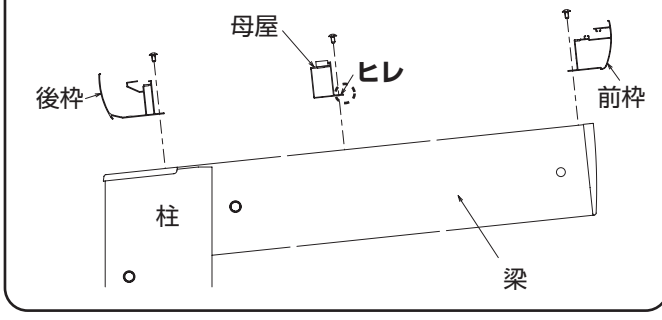

9.側枠・垂木の取付

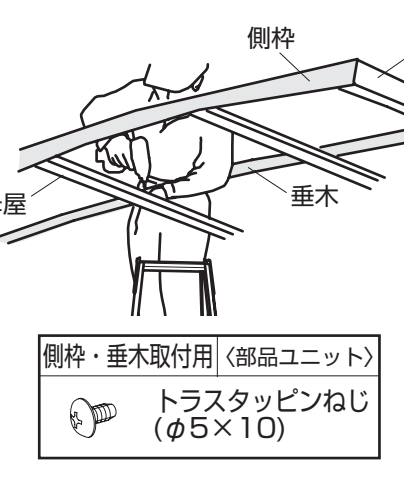


前枠、後枠キャップを取付けてください。

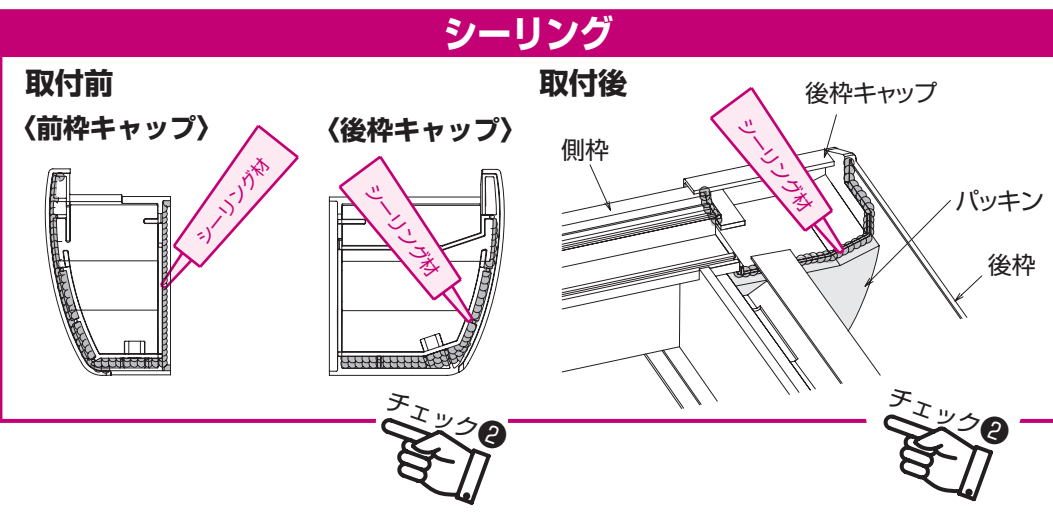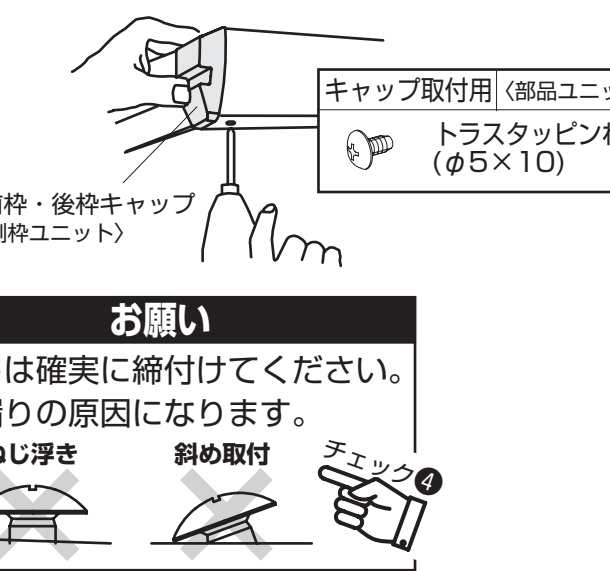

10.本体の仮固定と柱・梁取付ボルトの本締め

- ①再度寸法を確認してください。
- ②柱・梁取付ボルトを本締めしてください。

11.基礎コンクリートの打込み

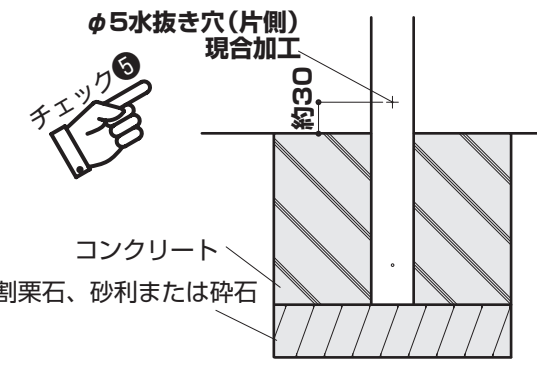

お願い



凍結破損防止のため、基礎部に割栗石、砂利または砕石を敷き、必ず水抜き穴をあけてください。

注意

屋根ふき材の取付けは、基礎コンクリートが確実に固まってから行ってください。基礎コンクリートは、4~7日の養生期間が必要です。



12.屋根ふき材・屋根ふき材押えの取付

取付前に、屋根ふき材の養生フィルムをはがしてください。

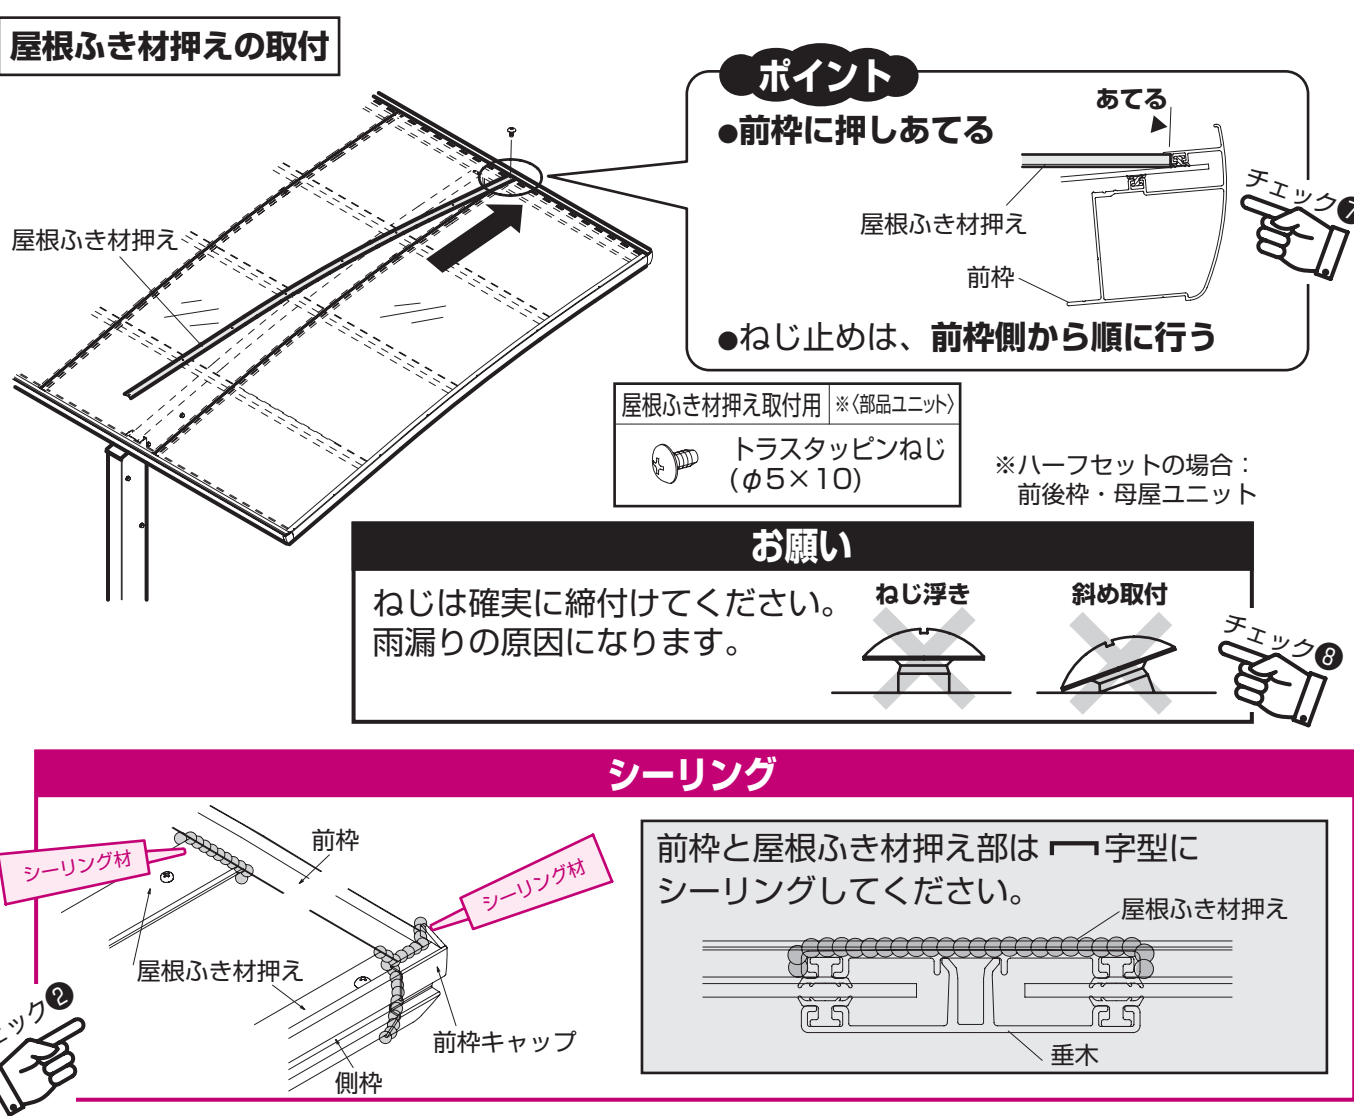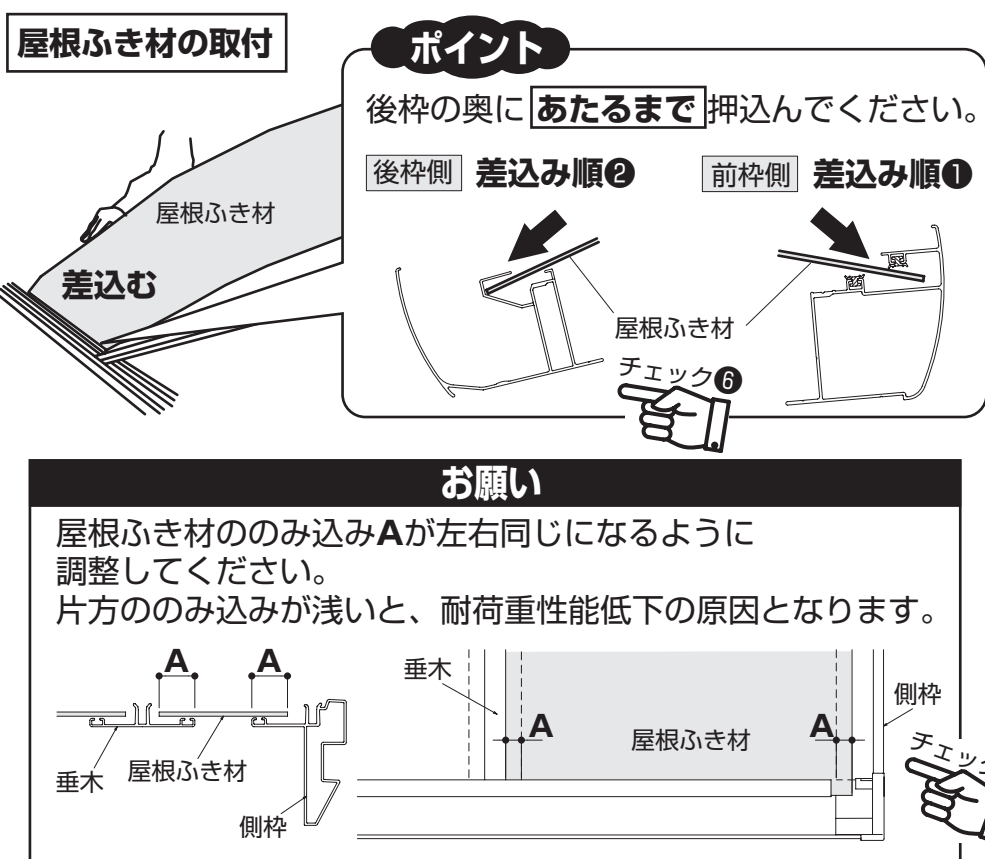

13.雨樋の取付

〈たて樋・呼び樋以外の部品(雨樋セット)は、部品ユニットに入っています。ハーフセットの雨樋セットは、ハーフセットの前後枠・母屋ユニットに入っています。〉

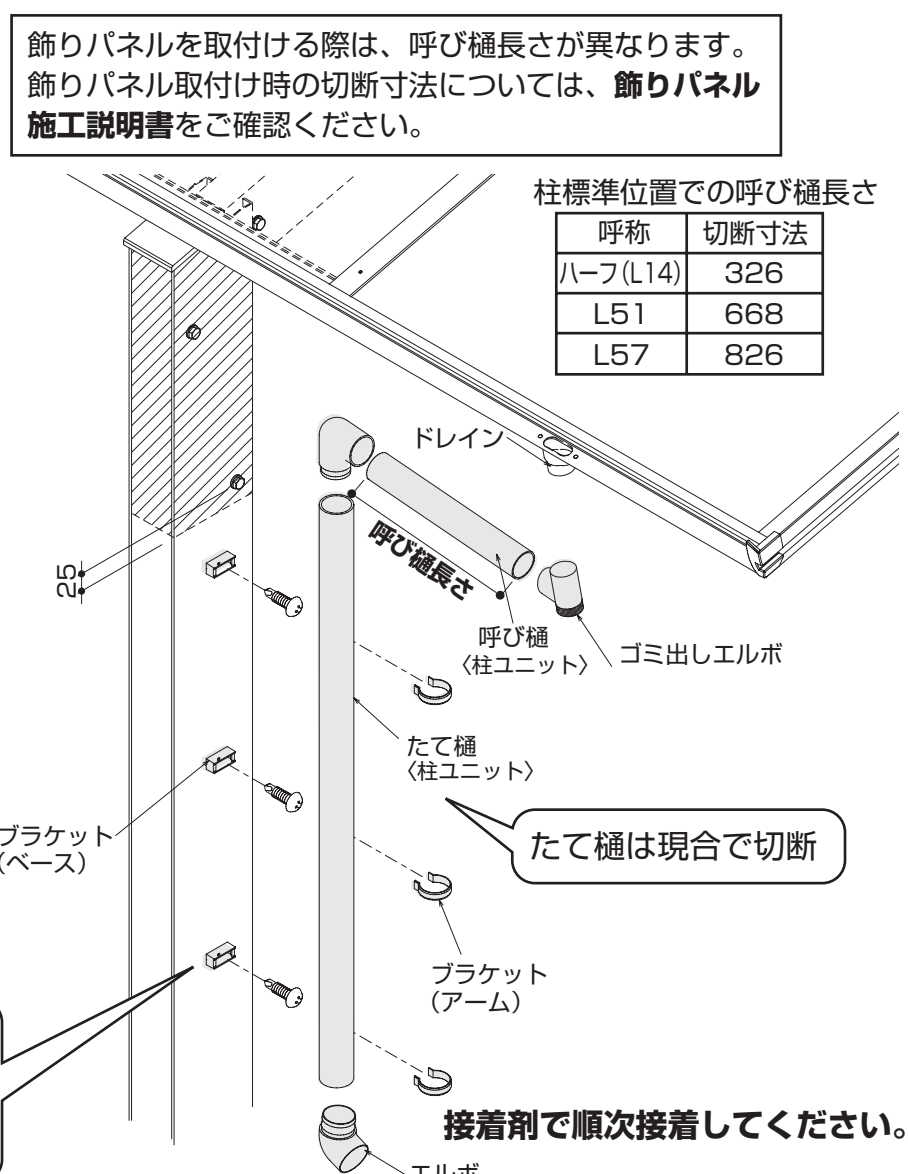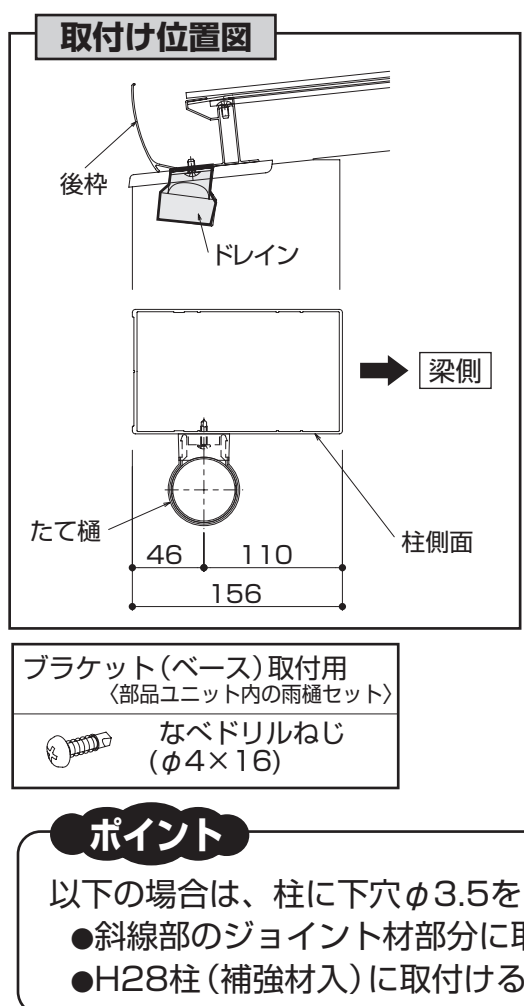

たて連棟する場合


1.部材の加工

前枠・後枠・母屋の連結部に穴加工(φ6)を行ってください。


前枠	後枠	母屋

2.たて連棟する場合の組立


①前枠・母屋・後枠の連結

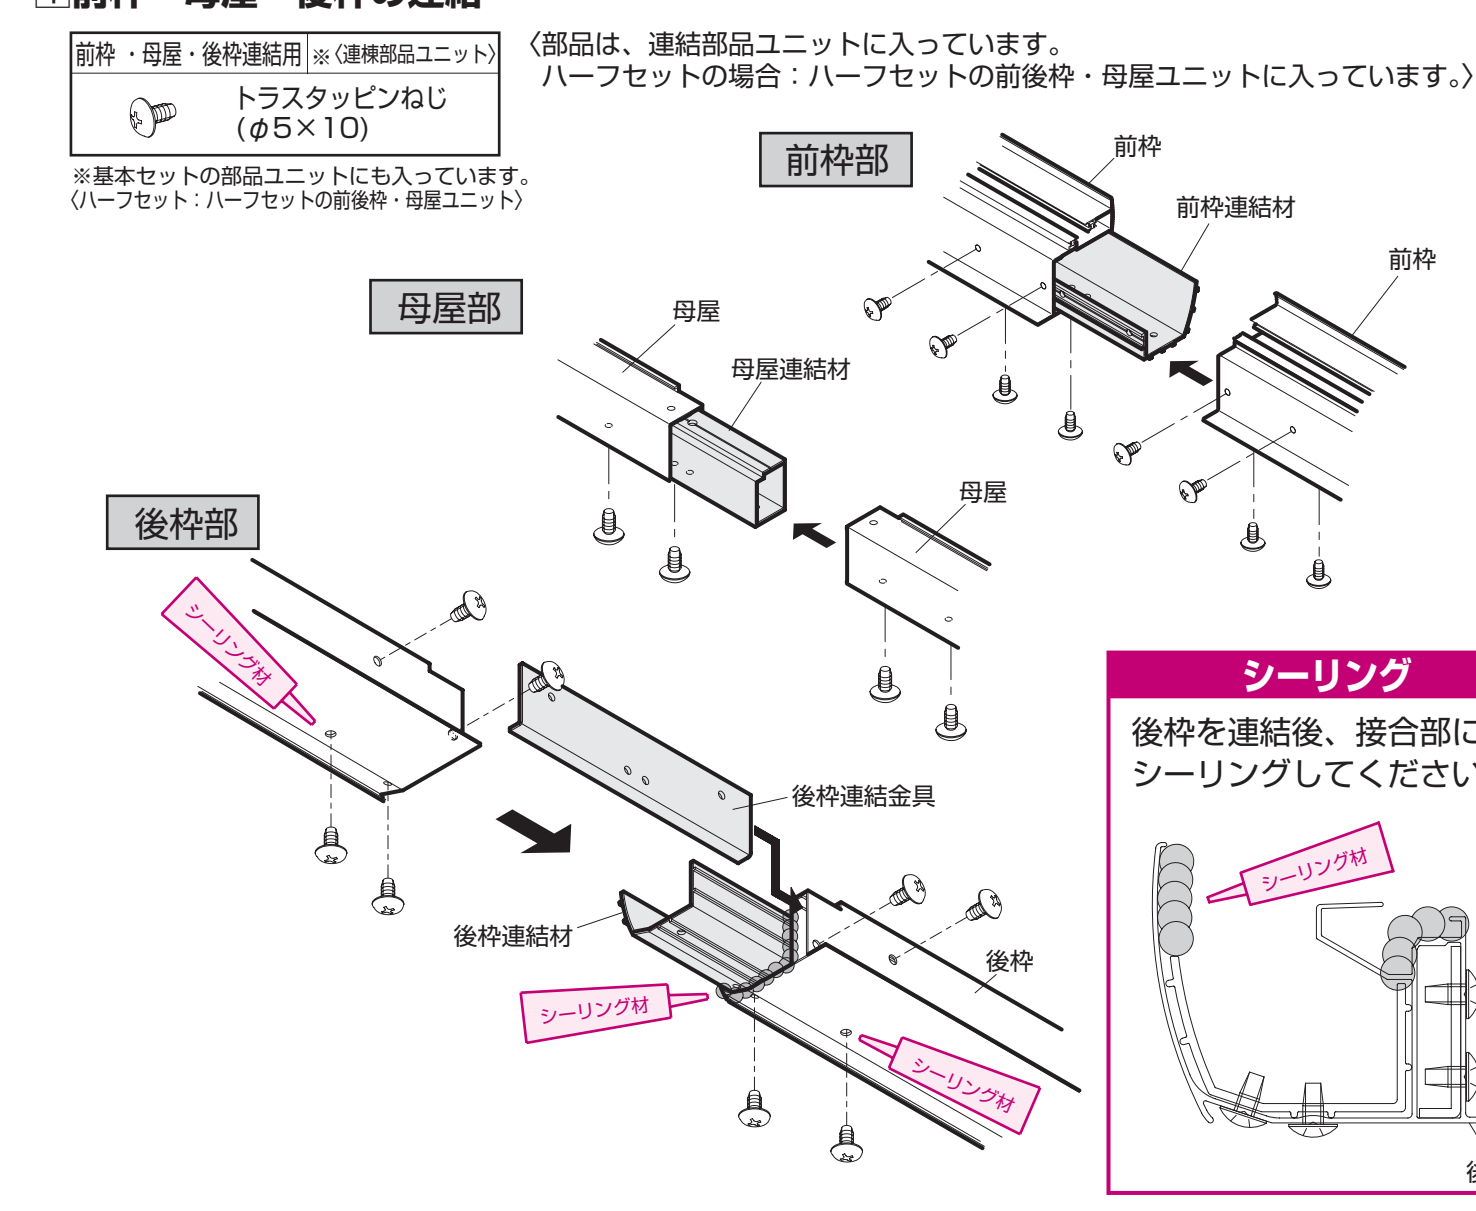

②連棟垂木の取付

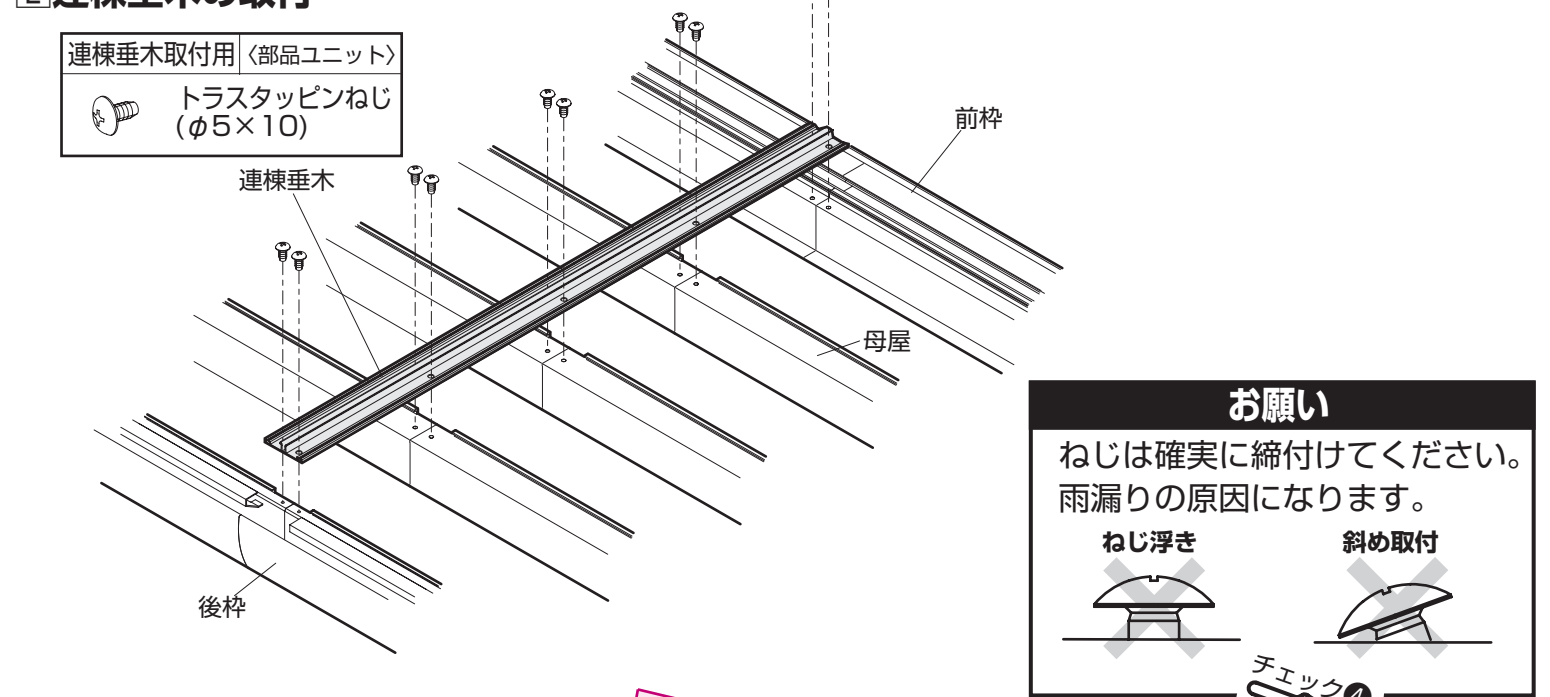


③前枠接合部のシーリング

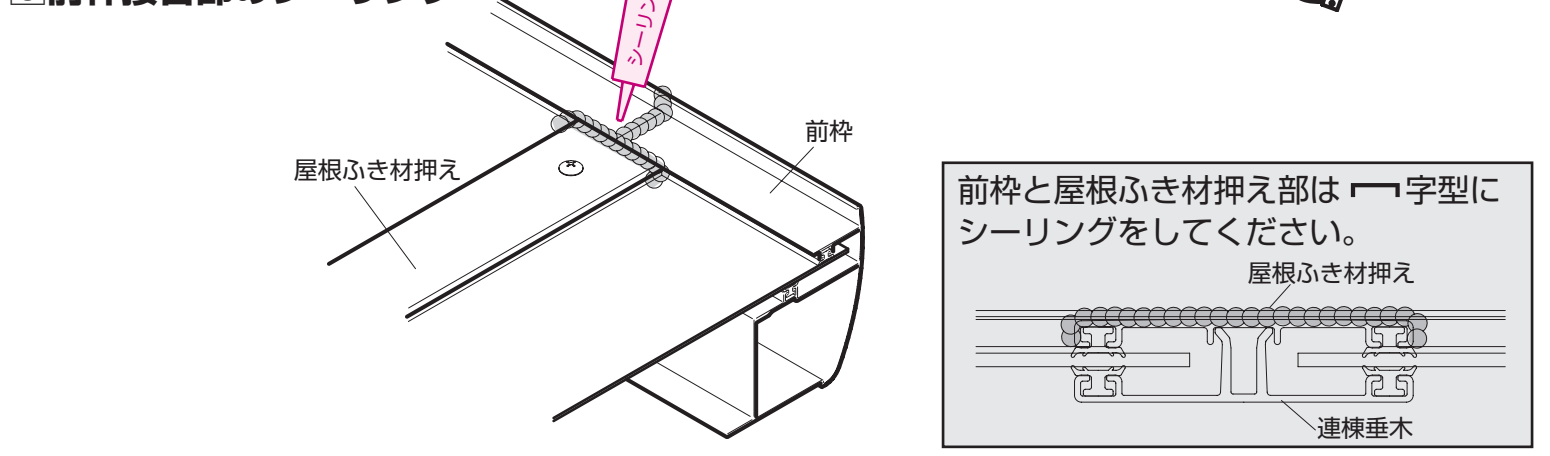


M合掌する場合

〈部品は全てM合掌部品ユニットに入っています。〉

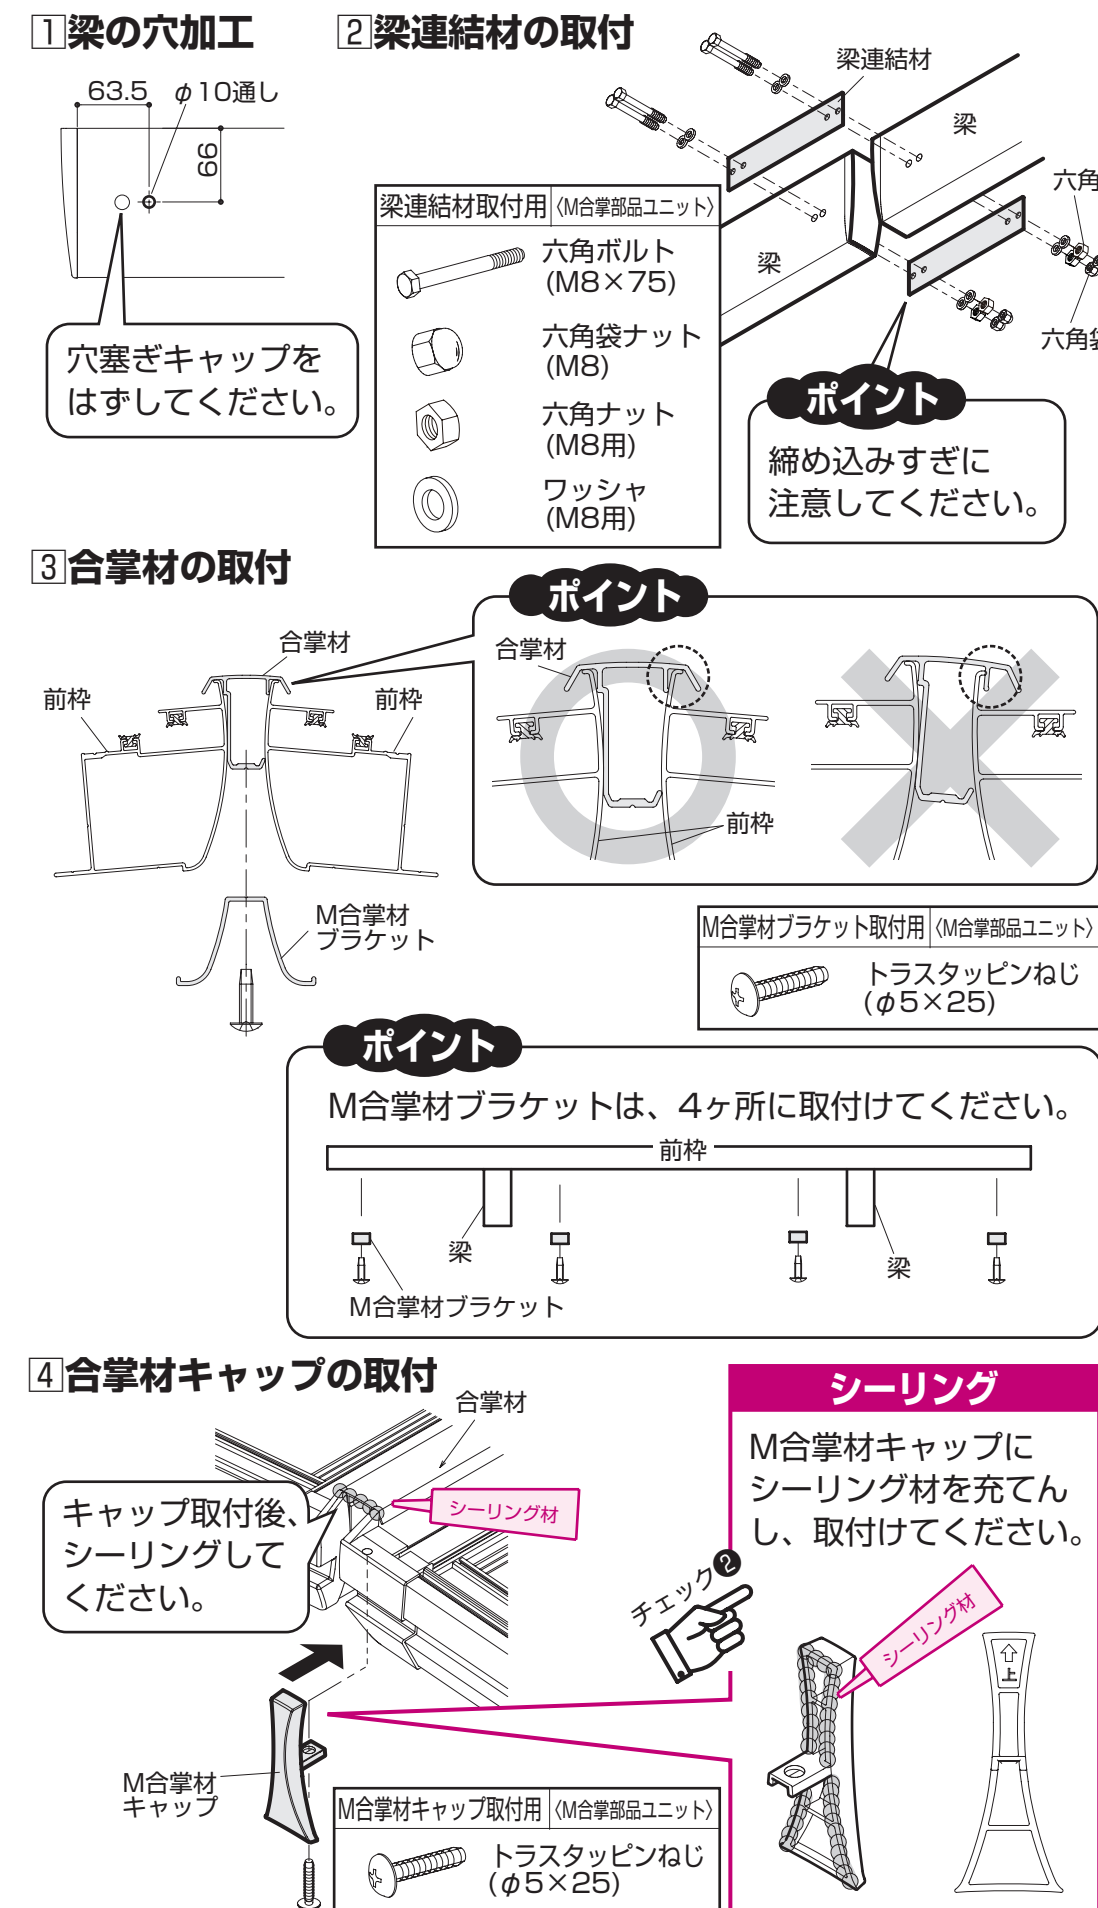

Y合掌する場合

〈部品はY合掌部品ユニットに入っています。〉

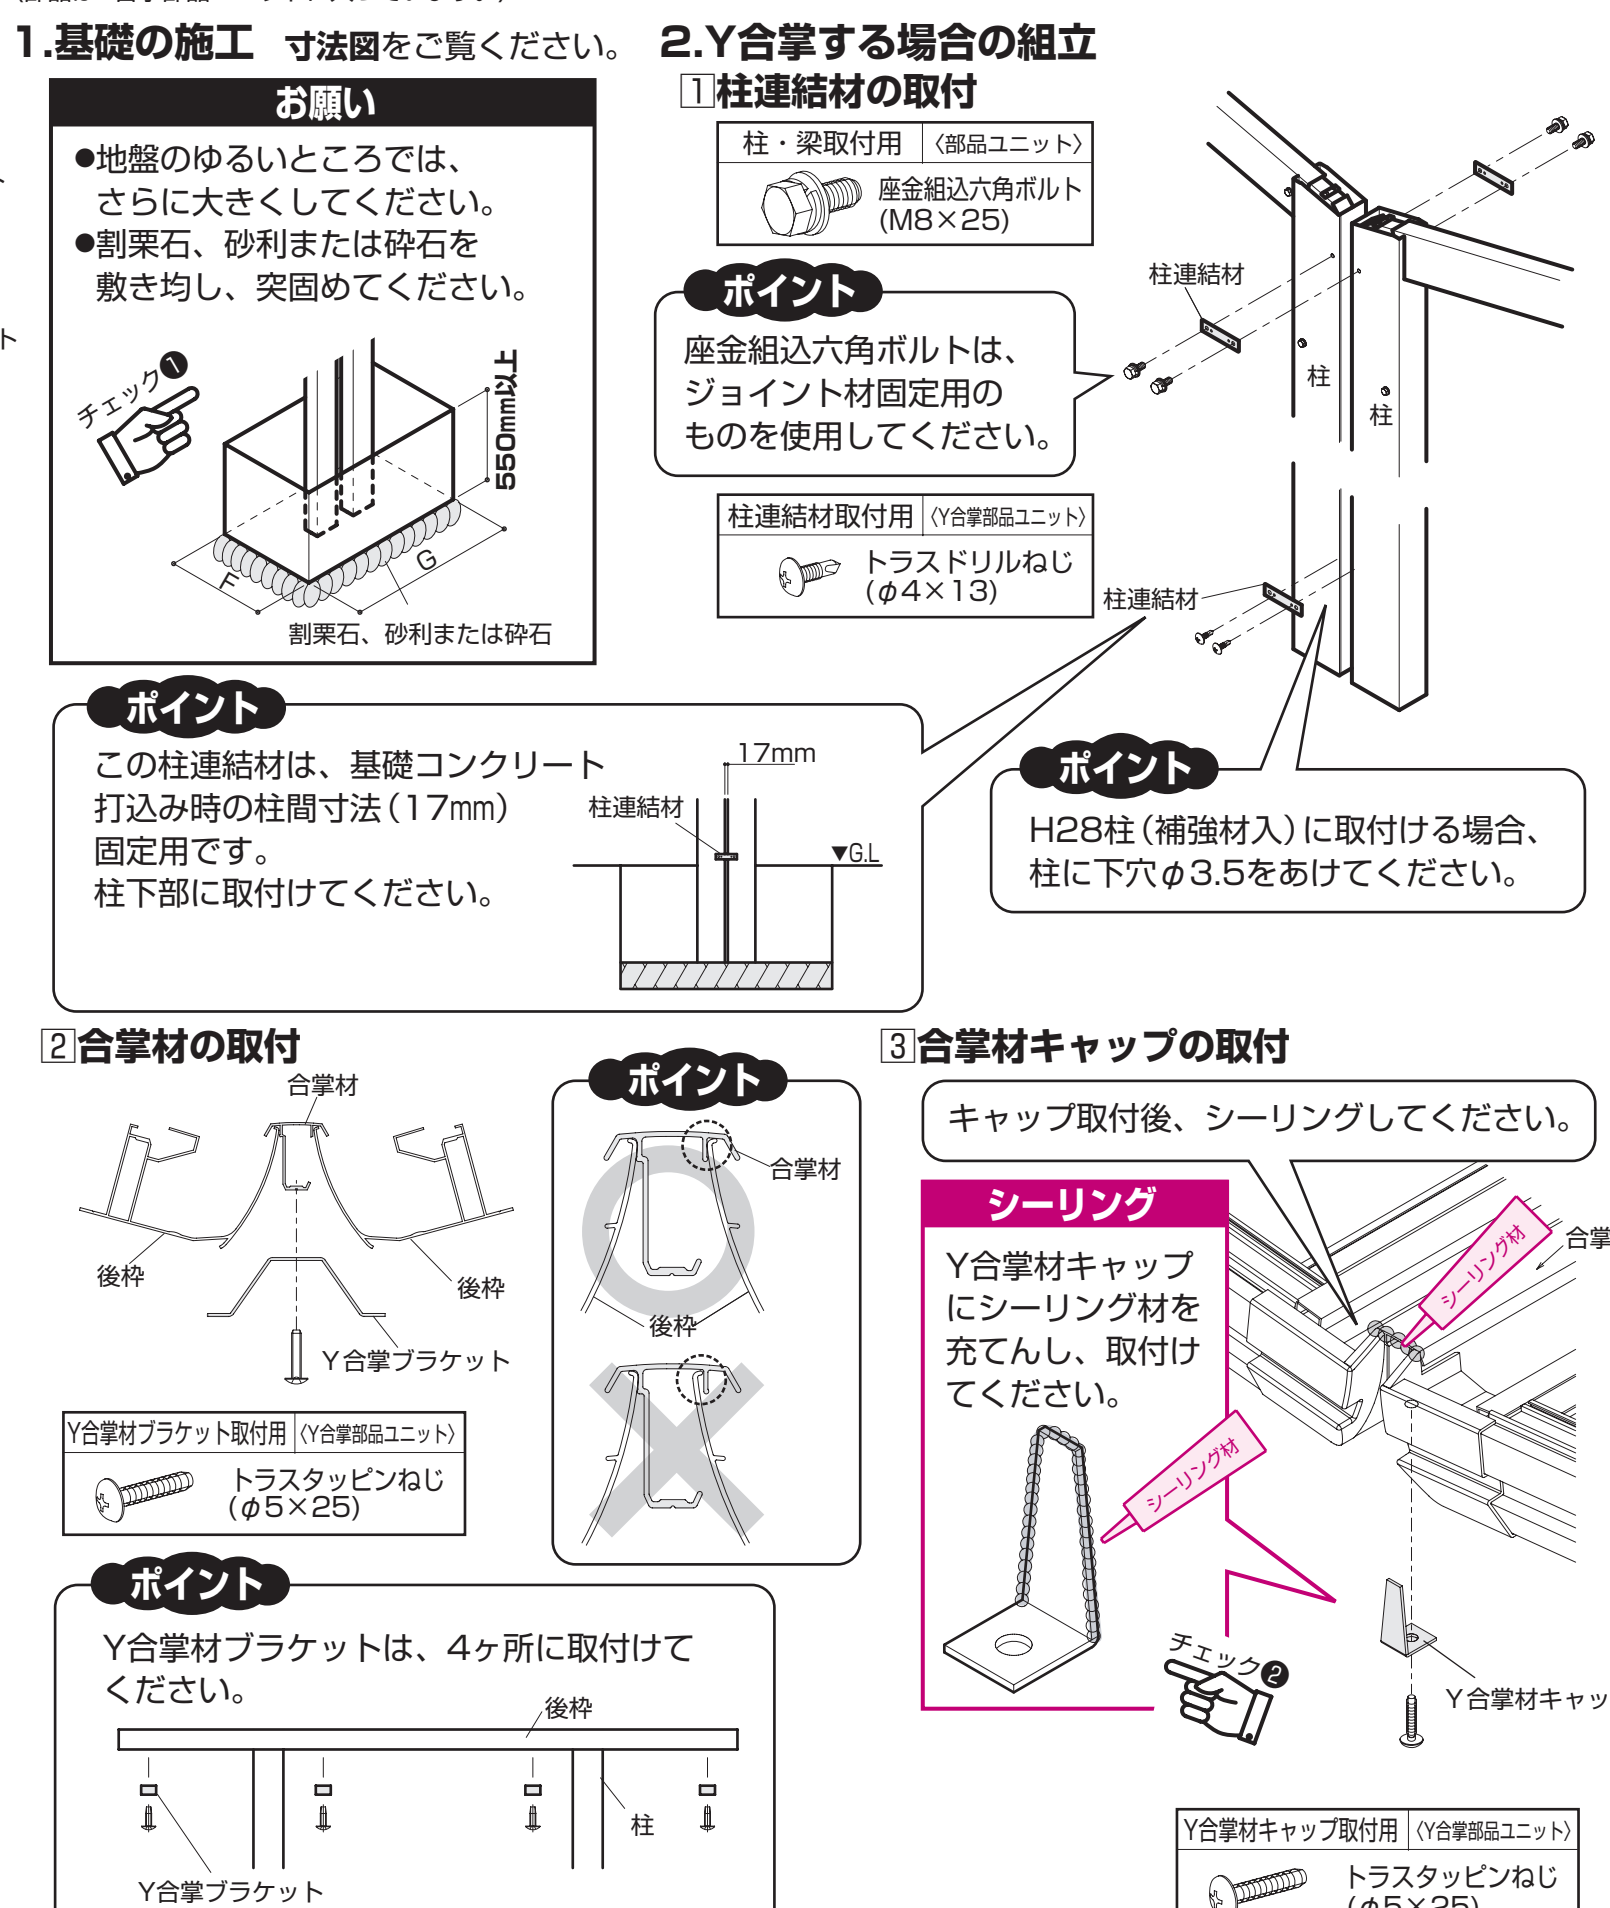

M合掌(Y合掌) たて連棟する場合

